Keyboard Layout Germany



PROGRAM

Keyboard Layout





Germany



END
(Exit Programming Mode)


Enable Code128




PROGRAM

Symbol ID : 1 character



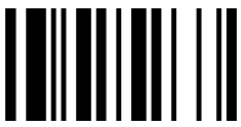

0 →

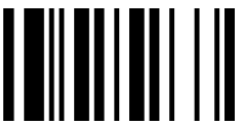

0 →



FIN (Finish)



END
(Exit Programming Mode)

Kein Biep beim entnehmen aus Ladestation



PROGRAM

Beeping Control





1

→



FIN (Finish)



END
(Exit Programming Mode)

Suffix Enter löschen



PROGRAM

Record Suffix





0

→



FIN (Finish)



END
(Exit Programming Mode)